

Design Concrete Maintenance

Design Concrete floors are totally maintenance free, since they require no waxing or sealers once applied during the installation

- Routine maintenance for design concrete floors consists of daily dust mopping to remove dirt and grime accumulation that can abrade the surface. Soils act as an abrasive and can ruin the clarity and shine of polished concrete.
- When mopping use only clean water and soap , (please avoid any strong chemicals, bleach or detergents)
- Try to clean spills and stains from the floor as quickly as possible so they don't absorb into the surface.



U.K's Premier Showroom Seen Interiors Ltd

20 Chepstow Corner Pembridge Villas, Notting Hill, London W2 4XE

Tel 020 7727 4083 - design-concrete.co.uk - contact@design-concrete.co.uk